


## VOLKSWAGEN - VENTO (1992 - 1998)

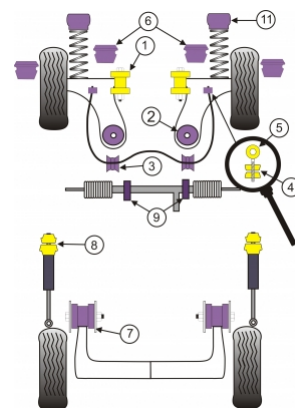

### Notes

- VR6 & GT models with chassis codes AAA, AGG & AKR Do Not Use PFR85-208
- For power steering mount bushes please measure the width of bracket and select the correct part number.
- PFF85-232 is suitable for vehicles with a 18.5mm wide bracket.
- PFF85-233 is suitable for vehicles with a 15mm wide bracket.
- This bush is suitable for Vento models from 1992 to 1996 with 5 stud wheels only. From 1996 to 1998 they fit all models.





### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Wishbone Front Bush</b>	2	1	<b>PFF85-201</b>	<b>Ex. VAT:</b> £19.31 <b>Inc. VAT:</b> £23.17
 <b>Front Wishbone Inner Bush (rear)</b> Click for fitting instructions	2	2	<b>PFF85-204</b>	<b>Ex. VAT:</b> £18.95 <b>Inc. VAT:</b> £22.74
 <b>Front Anti Roll Bar Mount 18mm</b>	2	3	<b>PFF85-205</b>	<b>Ex. VAT:</b> £14.96 <b>Inc. VAT:</b> £17.95
 <b>Front Anti Roll Bar Bush 20mm</b>	2	3	<b>PFF85-205-20</b>	<b>Ex. VAT:</b> £14.96 <b>Inc. VAT:</b> £17.95

	<b>Front Eye Bolt Mounting Bush</b>	2	4	<b>PFF85-208</b>	<b>Ex. VAT:</b> £13.60 <b>Inc. VAT:</b> £16.32
	<b>Front Eye Bolt Mounting Bush 10mm</b>	2	4	<b>PFF85-208-10</b>	<b>Ex. VAT:</b> £13.60 <b>Inc. VAT:</b> £16.32
	<b>Front Anti Roll Bar Eye Bolt Bush 18mm</b>	2	5	<b>PFF85-209</b>	<b>Ex. VAT:</b> £14.25 <b>Inc. VAT:</b> £17.10
	<b>Front Anti Roll Bar Eye Bolt Bush 20mm</b>	2	5	<b>PFF85-209-20</b>	<b>Ex. VAT:</b> £14.25 <b>Inc. VAT:</b> £17.10
	<b>Front Subframe Mounts</b>	4	6	<b>PFF85-250</b>	<b>Ex. VAT:</b> £7.36 <b>Inc. VAT:</b> £8.83
	<b>Rear Beam Mounting Bush</b>	2	7	<b>PFR85-206</b>	<b>Ex. VAT:</b> £28.99 <b>Inc. VAT:</b> £34.79
	<b>Rear Shock Top Mounting Bush</b>	2	8	<b>PFR85-240</b>	<b>Ex. VAT:</b> £13.95 <b>Inc. VAT:</b> £16.74
	<b>Non Power Steering Rack Mount</b>	2	9	<b>PFF85-231</b>	<b>Ex. VAT:</b> £11.50 <b>Inc. VAT:</b> £13.80
	<b>Power Steering Rack Mount</b>	1	9	<b>PFF85-232</b>	<b>Ex. VAT:</b> £11.50 <b>Inc. VAT:</b> £13.80
	<b>Power Steering Rack Mount</b>	1	9	<b>PFF85-233</b>	<b>Ex. VAT:</b> £11.50 <b>Inc. VAT:</b> £13.80
	<b>Front Strut, Top Mount</b>	2	11	<b>PFF85-239</b>	<b>Ex. VAT:</b> £22.95 <b>Inc. VAT:</b> £27.54
	<b>Bump Stop Front</b>	2		<b>BS006</b>	<b>Ex. VAT:</b> £12.08 <b>Inc. VAT:</b> £14.50
	<b>PowerAlign Camber Bolt Kit (12mm)</b>  <a href="#">Click for fitting instructions</a>	1		<b>PFA100-12</b>	<b>Ex. VAT:</b> £15.74 <b>Inc. VAT:</b> £18.89
	<b>Exhaust Mounts</b>	1		<b>EXH006</b>	<b>Ex. VAT:</b> £5.86 <b>Inc. VAT:</b> £7.03
	<b>Bump Stop Rear</b>	2		<b>BS008</b>	<b>Ex. VAT:</b> £12.08 <b>Inc. VAT:</b> £14.50
	<b>Bump Stop Kit</b>  <a href="#">Click for fitting instructions</a>	1		<b>BS2005K</b>	<b>Ex. VAT:</b> £20.95 <b>Inc. VAT:</b> £25.14